



Closing Speed Adjustment



Power Adjustment

1. Adjustment of clearance between hinge jamb and door stile: Loosen screws (B) and (C).
2. Adjustment of door height: Loosen screws (B), (C), and adjust screw (A).
3. Centering door: Loosen screws (B) and (C).
4. Adjustment of closing speed: -Two regulating valves (D) and (E).
5. Adjustment of spring tension (F):
 - ⤴ decrease closing speed.
 - ⤵ increase closing speed.
 - Valve (D): control closing range 180°-15°
 - Valve (E): control closing range 15°-0°
 - ⤴ increase spring tension
 - ⤵ decrease spring tension



Use 13mm Open end wrenches

EN 3	EN 4	EN 5	EN 6
-10	+0	+10	+20

Factory presetting size : EN 4

